FC2T Wired Fan Control Board

The FC2T works with the T511FC and T511FCWF thermostats to control whole house fans. The control board is provided on a metal plate that installs in the electrical box on the whole house fan. Provides 1 or 2-speed control of PSC or ECM fan motors or variable speed control of ECM motors using the PWM input.



Specifications

Compatible Thermostats T511FC and T511FCWF

Compatible PSC Fan Motors 1 or 2-speed operation with optional speed staging.

Compatible ECM Fan Motors 1 or 2-speed operation or variable speed operation with ramping for quiet operation and optional speed staging.

ECM Variable Speed Control Uses PWM signal.

Installation

Installs in WHF electrical box. Connects to thermostat using thermostat wire.

FC2J Plug & Play Fan Control Board

The FC2J works with the WH42 and WH42H Wiring Hubs to control whole house fans. The control board is provided on a metal plate that installs in the electrical box on the whole house fan. Provides 1 or 2-speed control of PSC or ECM fan motors or variable speed control of ECM motors using the PWM input.



RJ11 Connector is on opposite side. 25-foot cable provided with each control.

Specifications

Compatible Wiring Hubs WH42 and WH42H

Compatible PSC Fan Motors1 or 2-speed operation with optional speed staging.

Compatible ECM Fan Motors 1 or 2-speed operation or variable speed operation with ramping for quiet operation and optional speed staging.

ECM Variable Speed Control Uses PWM signal.

Installation

Installs in WHF electrical box. Connects to wiring hub using 25-foot cable provided with each control.

RLY24D Wired Fan Control Board

The RLY24D works with the T511FC and T511FCWF thermostats to control whole house fans. The control board is provided on a metal plate that installs in the electrical box on the whole house fan. Provides control of single speed PSC or ECM fan motors.



Specifications

Compatible Thermostats T511FC and T511FCWF

Compatible PSC Fan MotorsSingle speed operation.

Compatible ECM Fan Motors Single-speed operation.

Installation

Installs in WHF electrical box. Connects to thermostat using thermostat wire.

